


# 2012 SNOWMOBILE

## ILLUSTRATED PARTS MANUAL

**Sno Pro® 120**

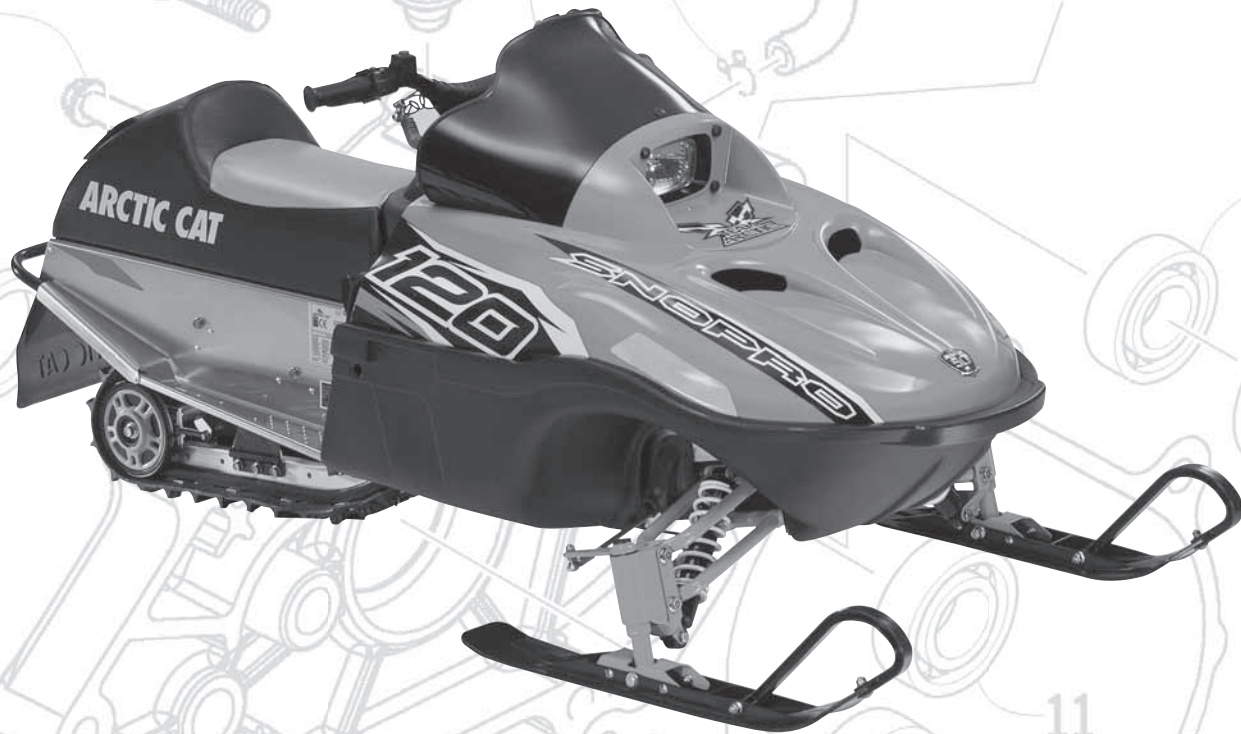

**Model Number S2012ACAAAUSG**


**ARCTIC CAT®**  
SHARE OUR PASSION.™

# TABLE OF CONTENTS

2012 Sno Pro 120  
(Model No. S2012ACAAAUSG)

SKI AND SPINDLE ASSEMBLY .....	1
A-ARM ASSEMBLY .....	2
FRONT SUSPENSION SHOCK ABSORBER .....	3
STEERING POST AND TIE ROD ASSEMBLY .....	4
DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES .....	5
SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY .....	6
REAR SUSPENSION ARM ASSEMBLY .....	7
CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY .....	8
HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY .....	9
BELLY PAN AND EXHAUST ASSEMBLIES .....	10
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY .....	11
ENGINE AND RELATED PARTS .....	12
AIR CLEANER ASSEMBLY .....	13
CARBURETOR ASSEMBLY .....	14
CYLINDER AND AIR BREATHER ASSEMBLY .....	15
PISTON AND CRANKSHAFT ASSEMBLY .....	16
CAMSHAFT AND VALVE ASSEMBLY .....	17
CRANKCASE/COVER ASSEMBLY .....	18
GOVERNOR ASSEMBLY .....	19
RECOIL STARTER AND AIR SHROUD ASSEMBLY .....	20
MAGNETO .....	21


■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog.

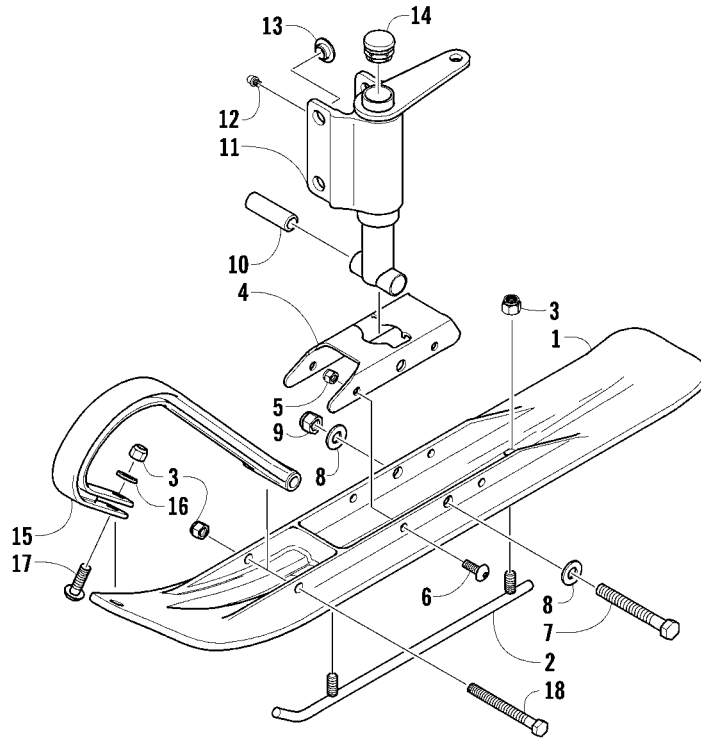

## SKI AND SPINDLE ASSEMBLY

0743-230


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	1603-593	2	Ski, Plastic - Black	10	1603-365	2	Axle
2	0703-698	2	Wearbar	11	2703-792	2	Spindle - Green (inc. 12-13)
3	1623-869	8	Nut, Lock	12	1623-845	2	● Fitting, Grease
4	2703-396	2	Saddle, Ski - Green	13	0603-647	8	● Insert, Spindle
5	1623-868	8	Nut, Lock	14	0623-831	2	Cap, Spindle
6	1623-857	8	Screw, Machine	15	1603-594	2	Handle, Ski - Black
7	1623-855	2	Screw, Cap	16	1623-874	2	Washer
8	1623-875	4	Washer	17	1623-858	2	Screw, Machine
9	1623-870	2	Nut, Lock	18	1623-853	2	Screw, Cap

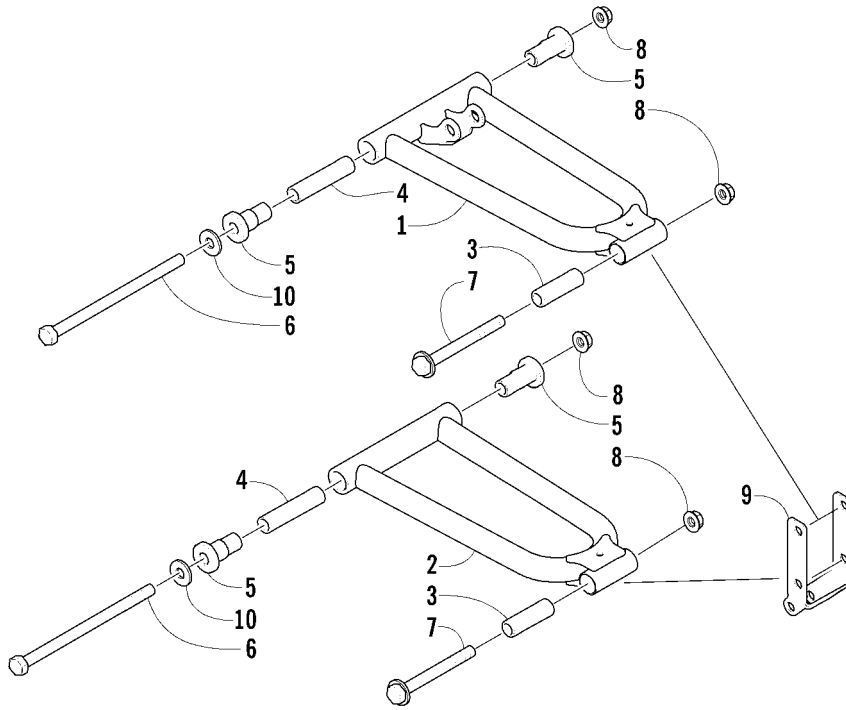

## A-ARM ASSEMBLY

0741-771


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	2703-392	2	A-Arm - Upper - Green	6	0623-900	4	Screw, Cap
2	2703-393	2	A-Arm - Lower - Green	7	1623-864	4	Screw, Cap
3	1603-365	4	Axle	8	1623-870	8	Nut, Lock
4	1603-394	4	Axle, Inner	9	2703-526	2	Bracket, Mounting - Shock - Green
5	0605-451	8	Axle, Powder Metal	10	1623-875	4	Washer

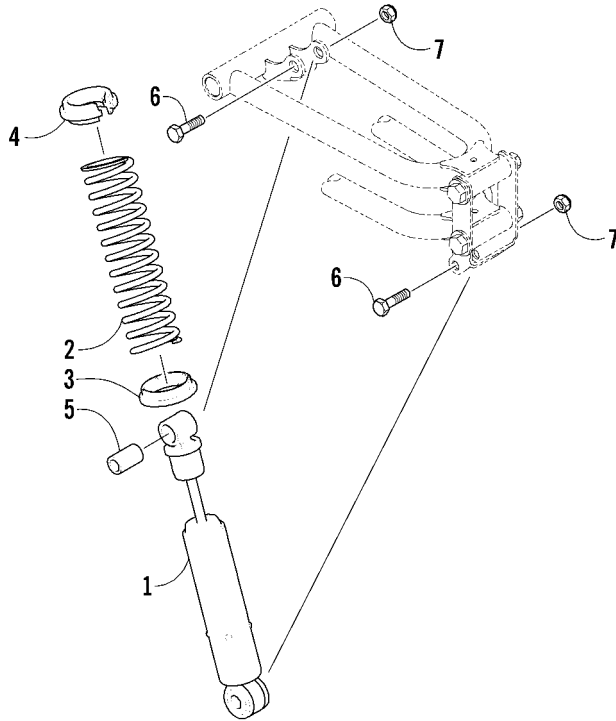

### FRONT SUSPENSION SHOCK ABSORBER

0740-317


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	2603-517	2	Shock, Ski	5	1603-531	2	Axle
2	2703-397	2	Spring, Shock - White	6	1623-854	4	Screw, Cap
3	0403-027	2	Retainer, Spring - Lower	7	1623-866	4	Nut, Lock
4	2603-520	2	Retainer, Spring - Upper				

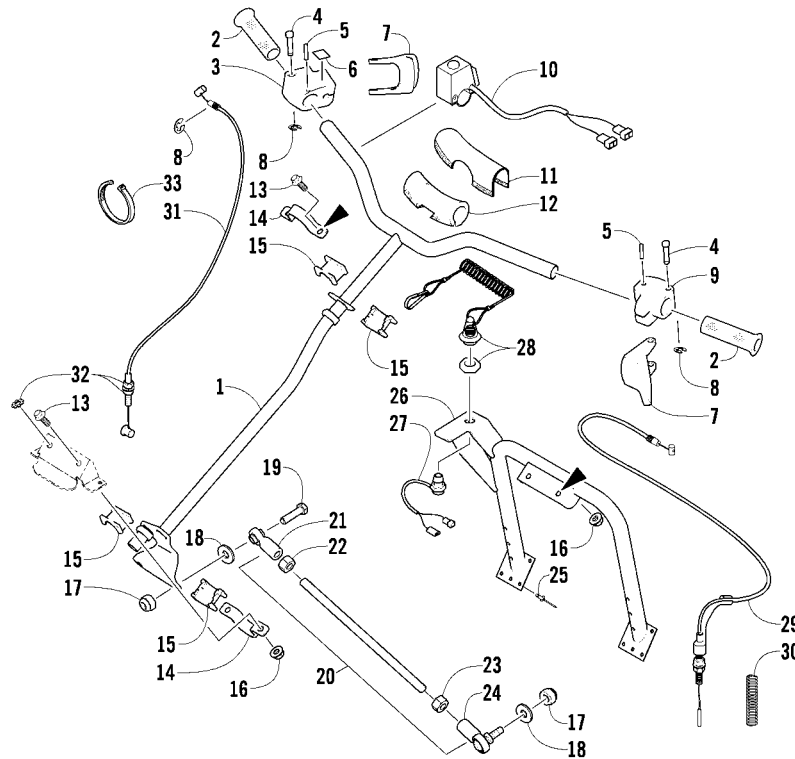

## STEERING POST AND TIE ROD ASSEMBLY

0744-909


Ref	Part No.	New	Qty	Description	Ref	Part No.	New	Qty	Description
1	1705-313		1	Post, Steering - Black	19	8004-135		2	Screw, Cap
2	1606-765		2	Grip, Handle	20	1703-853		2	Tie Rod - Assembly (inc. 21-24)
3	0302-165		1	Control, Throttle	21	-		2	● Rod End - Left-Hand Thread - Not Individually Serviced
4	1623-828		2	Pin	22	0623-260		2	● Nut, Hex - Left-Hand Thread
5	1623-882		2	Pin, Spring	23	0123-144		2	● Nut, Hex - Right-Hand Thread
6	0611-022		1	Decal, Engine Stop Switch	24	-		2	● Rod End - Right-Hand Thread - Not Individually Serviced
7	0109-609		2	Lever, Throttle/Brake	25	1623-876		10	Rivet
8	0123-231		3	Ring, Retaining	26	1707-444		1	Support, Steering Post - Black
9	0302-147		1	Housing, Brake	27	0630-266		1	Switch, Tether - Assembly (inc. 28)
10	0609-007		1	Switch, Engine Stop	28	0630-139		1	● Cord, Tether Switch
11	0605-560		1	Cover, Handlebar Pad	29	0687-229		1	Cable, Brake
12	0605-501		1	Pad, Handlebar	30	1602-100		1	Spring, Return - Brake
13	1623-861		4	Screw, Cap	31	0687-231		1	Cable, Throttle (inc. two No. 32)
14	0705-896		2	Retainer, Bearing	32	8053-212		3	● Washer, External Tooth Lock
15	0605-444		4	Bearing, Steering Post	33	0123-788		AR	Tie, Cable - 8 in.
16	1623-868		4	Nut, Lock					
17	1623-423		4	Nut, Lock					
18	1623-874		4	Washer					

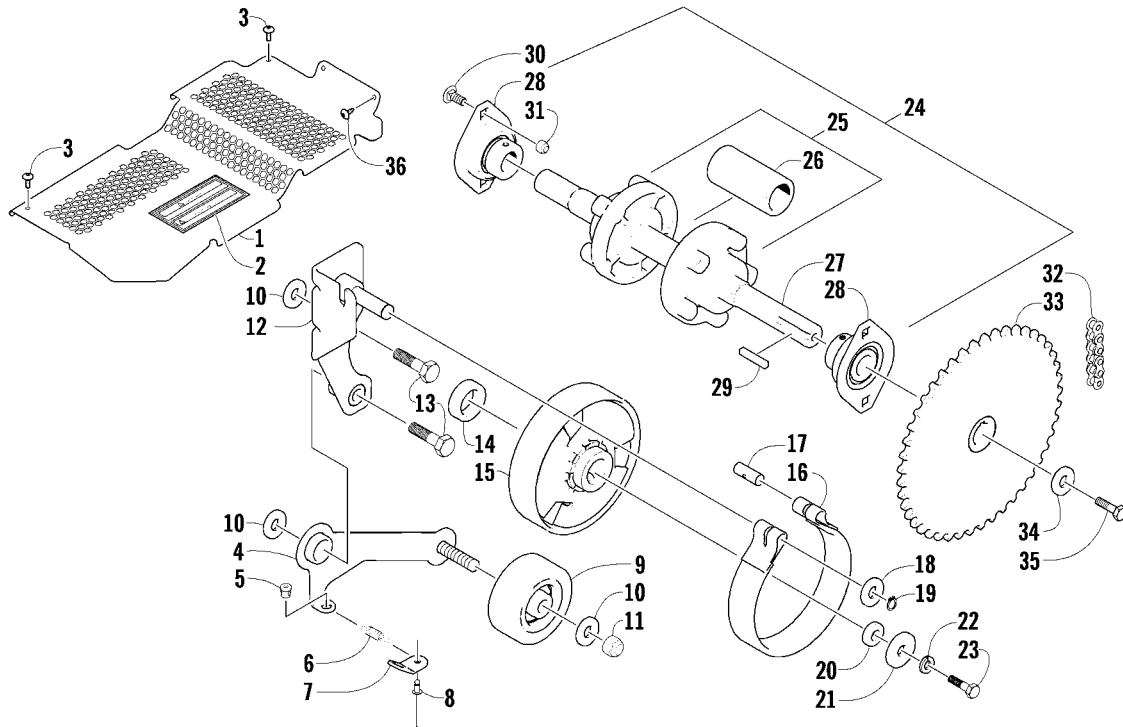

## DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES

0742-425

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0712-915	1	Shield, Clutch/Brake/Muffler	19	0623-821	1	Ring, Retaining
2	3611-754	1	Decal, Warning - Guard	20	1602-027	1	Spacer
3	0623-797	2	Screw, Self-Tapping	21	0123-260	1	Washer
4	0702-376	1	Tensioner, Chain	22	8051-242	1	Washer, Lock
5	0623-868	1	Bushing, Snap	23	8004-132	1	Screw, Cap
6	1612-178	1	Spring, Chain Tensioner	24	0728-167	1	Track Drive Assembly (inc. 25-28)
7	2606-021	1	Tab, Spring Retainer	25	1602-117	2	● Sprocket, Drive
8	1623-876	1	Rivet	26	1602-148	1	● Spacer
9	1602-065	1	Roller, Chain Tensioner	27	1602-850	1	● Driveshaft
10	1623-874	3	Washer	28	1602-992	2	● Bearing
11	8041-426	1	Nut, Lock	29	0623-823	1	Key
12	0702-360	1	Bracket, Brake	30	1623-856	4	Bolt, Carriage
13	1623-548	2	Screw, Cap	31	1623-869	4	Nut, Lock
14	1602-026	1	Spacer	32	2602-333	1	Chain - 76P
15	1602-020	1	Clutch, Centrifugal	33	1602-975	1	Sprocket, Chain
16	1602-021	1	Band, Brake (inc. 17)	34	0123-019	1	Washer
17	1602-049	1	● Pin, Retainer - Brake Cable	35	1623-549	1	Screw, Cap
18	1623-875	1	Washer	36	1623-129	1	Screw, Self-Tapping

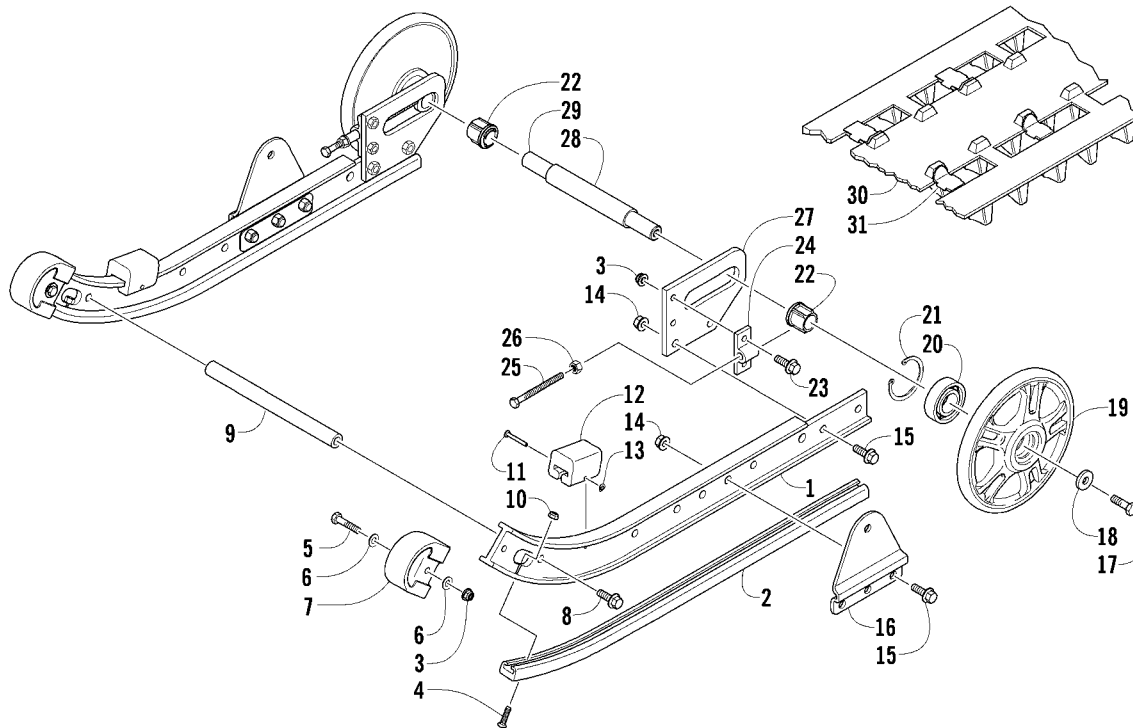


## SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY

0744-844

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
-	1704-883	1	Complete Skid Frame Assembly	16	0704-896	2	Bracket, Support - Arm
1	1604-705	2	Rail, Formed	17	1623-427	2	Screw, Cap
2	1604-568	2	Wearstrip, Slide Rail - Black	18	0623-664	2	Washer
3	1623-868	6	Nut, Lock	19	3604-042	2	Wheel, Idler - Rear - Green (inc. 20-21)
4	0123-859	2	Screw, Machine	20	3604-033	2	● Bearing
5	1623-852	2	Screw, Cap	21	0623-946	2	● Ring, Retaining
6	1623-872	4	Washer	22	3604-503	2	Bushing, Adjuster
7	0604-231	2	End Cap, Slide Rail	23	1623-861	4	Screw, Cap
8	1623-566	2	Screw, Cap	24	0604-206	2	Adjuster, Track
9	1604-566	1	Axle, Cross-Brace	25	0124-310	2	Screw, Cap
10	1623-865	2	Nut, Lock	26	1623-867	2	Nut
11	0123-767	2	Rivet, Solid	27	3604-543	2	Housing, Axle - Rear
12	0104-631	2	Pad, Shock	28	3604-541	1	Spacer
13	0423-090	2	Nut, Push	29	3604-542	1	Axle, Rear
14	1623-869	10	Nut, Lock	30	1602-015	1	Track Assembly (inc. 31)
15	1623-862	10	Screw, Cap	31	1602-079	32	● Clip, Guide




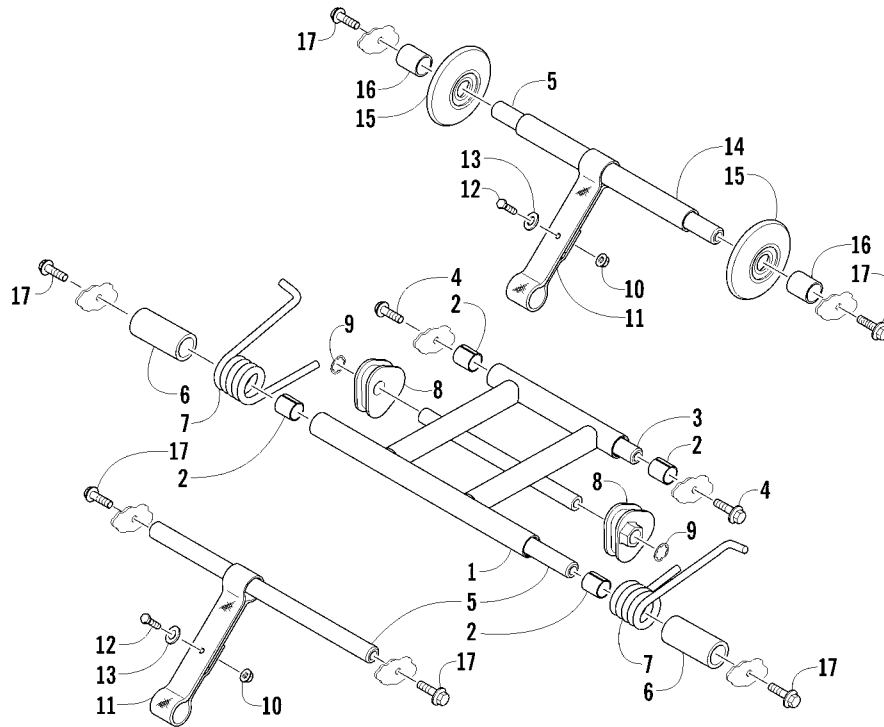

## REAR SUSPENSION ARM ASSEMBLY

0745-472


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	2704-016	1	Arm, Rear Suspension (inc. 2)	9	0623-138	2	Ring, Retaining
2	0603-083	4	● Bearing	10	1623-868	2	Nut, Lock
3	3604-606	1	Axle, Lower	11	1604-708	2	Strap, Limiter
4	1623-566	2	Screw, Cap	12	1623-851	2	Screw, Cap
5	3604-605	3	Axle, Idler	13	1623-873	2	Washer
6	1604-715	2	Sleeve, Spring	14	1604-564	1	Spacer
7	0704-894	1	Spring, Suspension - Right	15	0300-180	2	Wheel, Idler
	0704-895	1	Spring, Suspension - Left	16	1604-565	2	Spacer
8	1604-204	1	Block, Spring Adjuster - Right	17	1623-862	6	Screw, Cap
	1604-205	1	Block, Spring Adjuster - Left				

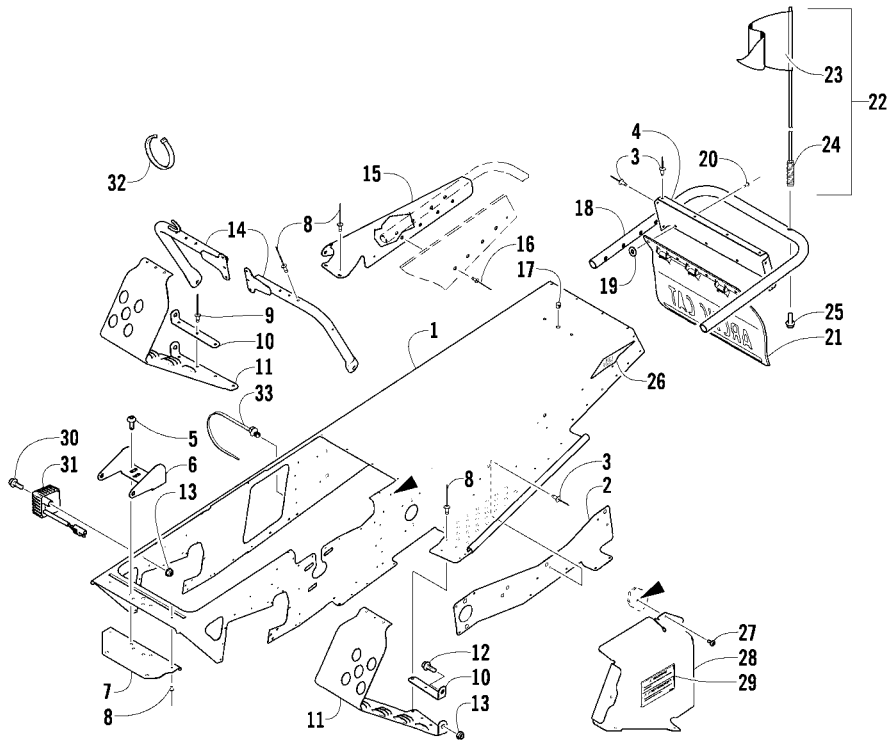

## CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY

0744-845


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3718-073	1	Tunnel Assembly (inc. 2-4)	16	1623-880	8	Rivet
2	2706-156	1	● Plate, Reinforcement - Right	17	0623-562	1	Plug, Hole
	2706-157	1	● Plate, Reinforcement - Left	18	3706-006	1	Bumper, Rear - Black
3	0123-418	26	● Rivet, Solid	19	0123-802	4	Washer
4	2706-158	1	● End Cap, Tunnel	20	1623-879	4	Rivet
5	0623-892	4	Screw, Self-Tapping	21	1606-750	1	Snowflap
6	2706-141	1	Bracket, Mounting - Hood	22	4706-878	1	Flag, Safety - Assembly (inc. 23-25)
7	3706-774	1	Plate, Reinforcement	23	1706-104	1	● Flag, Safety
8	1623-876	AR	Rivet	24	4706-643	1	● Mounting, Safety Flag - Assembly
9	1623-877	6	Rivet	25	1623-863	1	● Screw, Cap
10	2706-180	1	Bracket, Footrest Support - Right	26	6611-688	1	Decal, Reflector - Right - Red
	2706-181	1	Bracket, Footrest Support - Left		6611-689	1	Decal, Reflector - Left - Red
11	1606-784	1	Footrest - Right	27	0623-301	4	Screw, Self-Tapping
	1606-785	1	Footrest - Left	28	2706-217	1	Cover, Driven Sprocket
12	1623-861	2	Screw, Cap	29	3611-754	1	Decal, Warning - Cover
13	1623-868	3	Nut, Lock	30	8020-045	1	Screw, Cap
14	4706-824	1	Support, Footrest - Right	31	0630-181	1	Regulator, Voltage
	3706-773	1	Support, Footrest - Left	32	0123-788	AR	Tie, Cable - 8 in.
15	3606-994	1	End Cap, Rear Bumper - Right	33	0623-677	AR	Tie, Cable - Push-Mount
	3606-995	1	End Cap, Rear Bumper - Left				

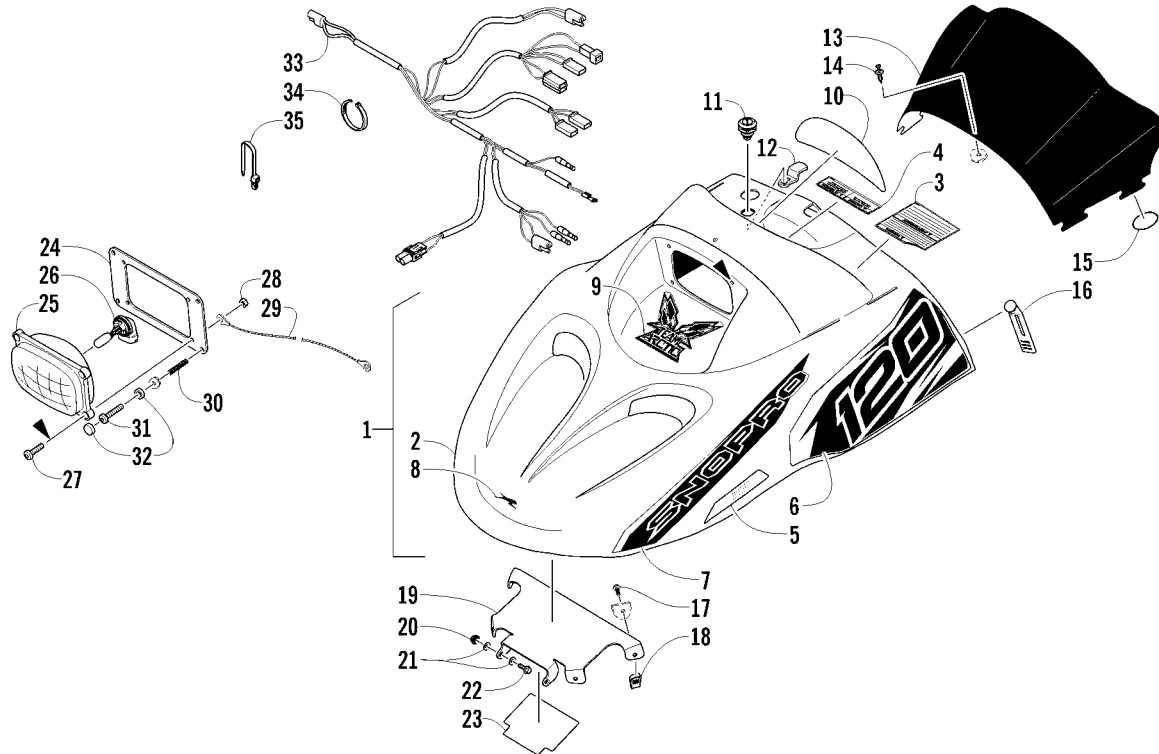

## HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY

0745-474


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3718-084	1	Hood w/Decals - Green (inc. 2-10)	17	0623-902	4	Screw, Machine
2	2718-270	1	● Hood w/o Decals - Green (inc. 3-5)	18	1623-023	4	Clip, U-Nut
3	3611-755	1	●● Decal, Caution - Throttle	19	2706-140	1	Bracket, Mounting - Hood - Upper
4	3611-678	1	●● Decal, Caution - Hood	20	1623-868	2	Nut, Lock
5	9611-382	1	●● Decal, Reflector - Right - Amber	21	1623-011	4	Washer
	9611-383	1	●● Decal, Reflector - Left - Amber	22	8020-039	2	Screw, Cap
6	9611-316	1	● Decal, Hood - Lower Right	23	8611-603	1	Decal, Jet Chart
	9611-317	1	● Decal, Hood - Lower Left	24	3706-719	1	Plate, Adapter - Headlight
7	9611-318	1	● Decal, Hood - Forward - Right	25	0609-817	1	Headlight Assembly (inc. 26)
	9611-319	1	● Decal, Hood - Forward - Left	26	0609-251	1	● Bulb, Headlight
8	8611-267	1	● Decal, AirCat - Chrome	27	1623-859	4	Screw, Machine
9	8611-716	1	● Decal, Hood - Crest	28	8041-246	4	Nut, Lock
10	9611-042	1	● Decal, Hood/Console	29	1606-158	1	Cable, Hood
11	1623-846	1	Latch, Hood	30	0123-614	4	Spring, Adjustment
12	1623-847	1	Arm, Hood Latch	31	1623-860	4	Screw, Machine
13	4606-411	1	Windshield	32	0124-054	4	Snap Cap w/Washer
14	0623-243	1	Clip, Retaining	33	1686-578	1	Harness, Wiring - Main
15	0616-032	4	O-Ring, Windshield	34	0123-788	AR	Tie, Cable - 8 in.
16	1606-930	2	Strap, Hold-Down	35	0623-677	AR	Tie, Cable - Push-Mount

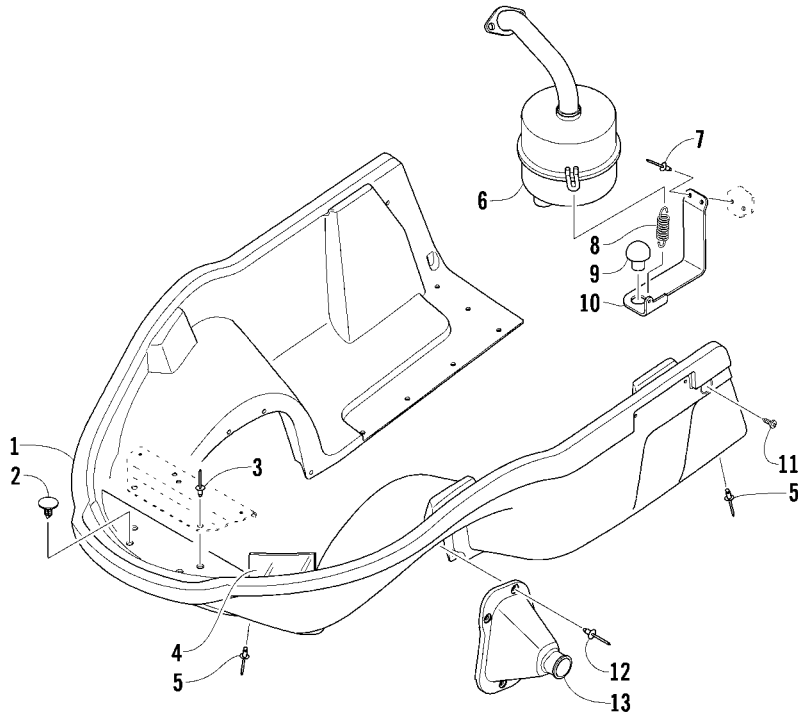

## BELLY PAN AND EXHAUST ASSEMBLIES

0744-847


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	6606-006	1	Belly Pan - Black (inc. 2)	8	0123-321	1	Spring, Extension
2	0623-544	2	● Clip, Retaining	9	0612-111	1	Bumper, Molded - Rubber
3	0623-778	2	Rivet	10	0712-914	1	Bracket, Muffler Support
4	0619-206	AR	Foil, Protective	11	1623-129	2	Screw, Self-Tapping
5	1623-881	22	Rivet	12	1623-878	7	Rivet
6	1712-593	1	Muffler	13	0605-464	1	Boot, Tie Rod - Right
7	1623-876	2	Rivet		0605-465	1	Boot, Tie Rod - Left

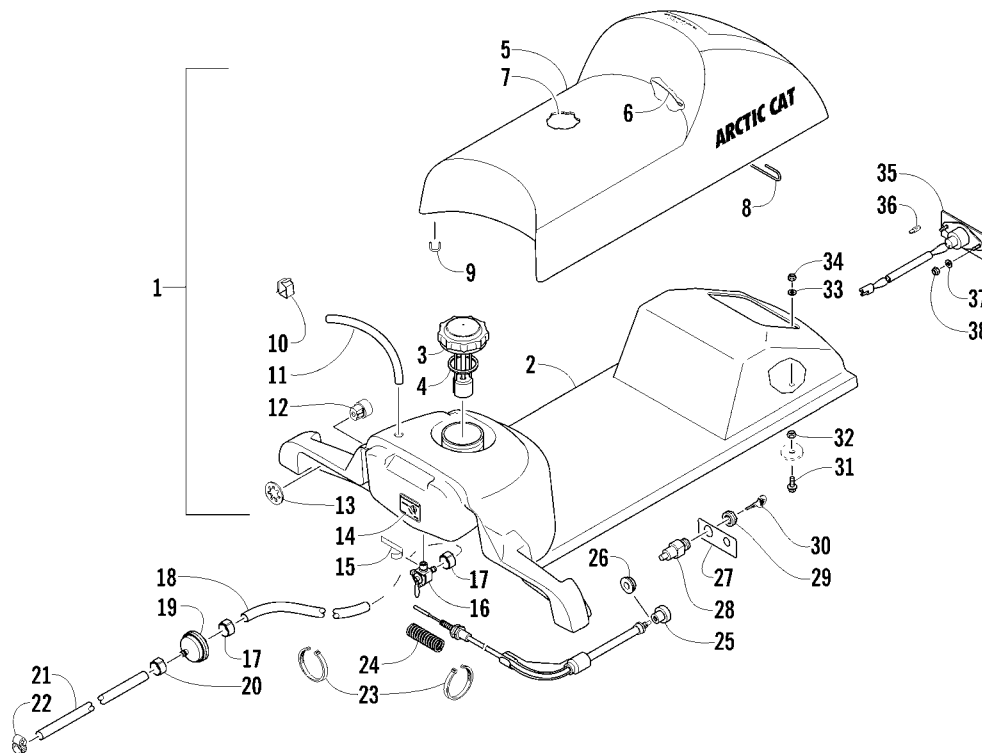

## GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY

0745-475


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3718-099	1	Complete Seat - Assembly (inc. 2-9)	20	0610-415	1	Clamp, Hose
2	1670-969	1	● Tank, Gas/Seat-Base	21	0610-772	AR	Hose, Gasline - 25 ft
3	1670-694	1	● Cap, Gas Tank w/Gauge (inc. 4)	22	0623-373	1	Clamp, Hose
4	0109-733	1	●● Seal, Tank Cap	23	0123-788	AR	Tie, Cable - 8 in.
5	5706-067	1	● Cover, Seat (inc. 6)	24	2670-144	1	Spring
6	5606-156	1	●● Wire, Seat	25	0687-230	1	Cable, Choke (inc. 26)
7	1706-017	1	● Foam, Seat	26	0687-181	1	● Nut, Choke Cable
8	2606-942	1	● Wire, Seat	27	4611-767	1	Decal, Switch/Choke
9	0624-528	AR	● Staple	28	0109-822	1	Switch, Ignition (inc. 29-30)
10	0123-394	1	Clip, Cable	29	0609-111	1	● Nut, Retaining
11	1670-647	1	Hose, Vent	30	0116-065	2	● Key
12	0116-469	1	Bushing, Recoil Starter	31	1623-861	2	Screw, Cap
13	1623-841	1	Nut, Push	32	1623-865	2	Nut, Lock
14	3611-856	1	Decal, Shut-Off Valve	33	0623-184	2	Washer
15	0670-289	AR	Tape, Teflon	34	0123-108	2	Nut, Cap
16	2670-064	1	Valve, Shut-Off - Gas Tank	35	0609-070	1	Taillight Assembly (inc. 36)
17	0610-419	2	Clamp, Hose	36	0230-020	1	● Bulb, Taillight
18	0410-143	AR	Hose, Gasline - 25 ft	37	1623-871	2	Washer
19	2670-075	1	Filter, Fuel	38	0123-709	2	Nut w/Washer

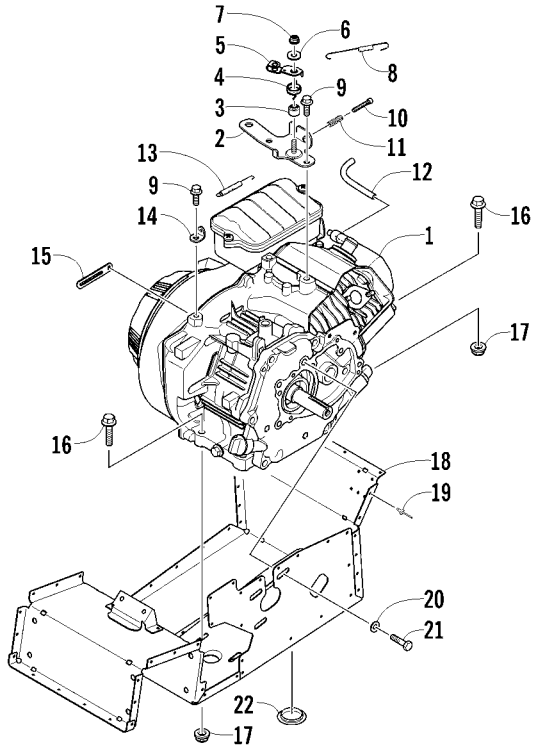

## ENGINE AND RELATED PARTS

0745-477


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	0662-560	1	Engine, 70CL1-030	12	0610-855	AR	Hose, Breather - 5 ft
2	2670-195	1	Bracket, Mounting - Throttle Cable	13	2670-127	1	Spring
3	2670-119	1	Spacer	14	4606-770	1	Bracket, Retaining
4	2670-134	1	Spring	15	3002-964	1	Clamp, Wire
5	2670-194	1	Lever, Throttle Cable	16	1623-863	4	Screw, Cap
6	1623-873	1	Washer	17	1623-869	4	Nut, Lock
7	1623-868	1	Nut, Lock	18	3706-775	1	Front End
8	2670-193	1	Spring	19	1623-876	AR	Rivet
9	8408-816	3	Screw, Cap	20	1623-874	1	Washer
10	1623-901	1	Screw, Cap	21	1623-550	1	Screw, Cap
11	2670-133	1	Spring	22	0623-822	5	Plug

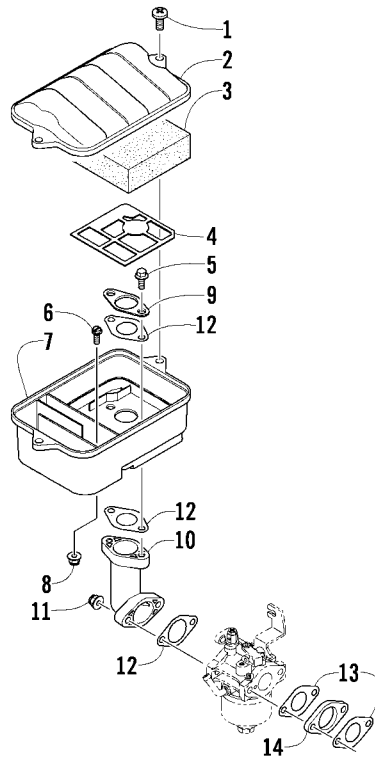

## AIR CLEANER ASSEMBLY

0744-908

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-094	2	Screw, Self-Tapping	8	8427-802	1	Nut, Lock
2	3020-055	1	Cover, Air Cleaner	9	3020-058	1	Insulator, Intake
3	3020-056	1	Filter, Air Cleaner	10	2670-110	1	Tube, Intake
4	3020-057	1	Plate, Retaining	11	8427-602	2	Nut, Lock
5	1623-661	2	Screw, Self-Tapping	12	3020-053	3	Gasket, Carburetor/Intake Tube
6	8408-825	1	Screw, Cap	13	3020-021	2	Gasket, Intake
7	3020-054	1	Case, Air Cleaner	14	3020-022	1	Insulator, Carburetor

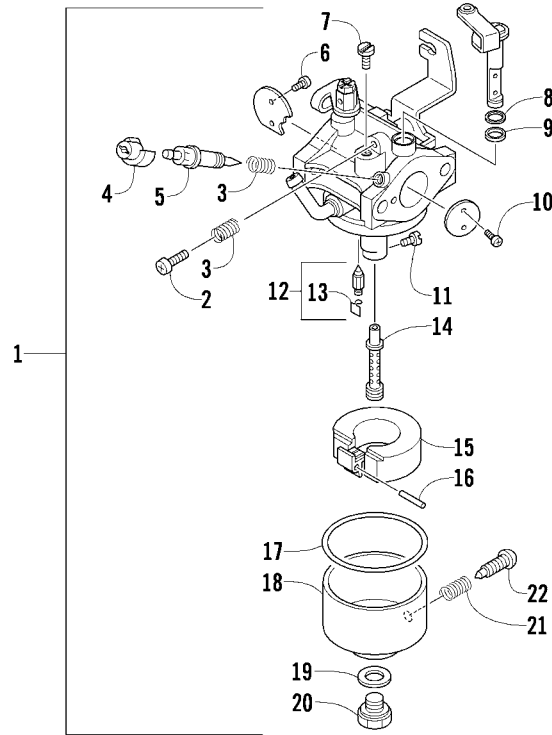


## CARBURETOR ASSEMBLY

0744-911

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-023	1	Carburetor Assembly (inc. 2-22)	12	3020-084	1	● Needle Jet - Assembly (inc. 13)
2	3020-001	1	● Screw, Throttle Stop	13	3020-080	1	●● Clip, Retaining
3	3020-005	2	● Spring	14	3020-089	1	● Nozzle
4	3020-086	1	● Cap, Adjuster Screw	15	3020-085	1	● Float
5	3020-088	1	● Adjuster Screw, Idle Fuel	16	3020-002	1	● Pin, Float
6	3020-091	2	● Screw, Machine	17	3020-082	1	● Gasket, Float Chamber
7	3020-131	1	● Pilot Jet (37.5)	18	3020-081	1	● Chamber, Float
8	3020-003	1	● Washer	19	3020-083	1	● Washer
9	3020-004	1	● Washer	20	3020-087	1	● Screw, Cap
10	3020-090	2	● Screw, Machine	21	3020-005	1	● Spring
11	3020-130	1	● Main Jet (77.5)	22	3020-079	1	● Screw, Drain




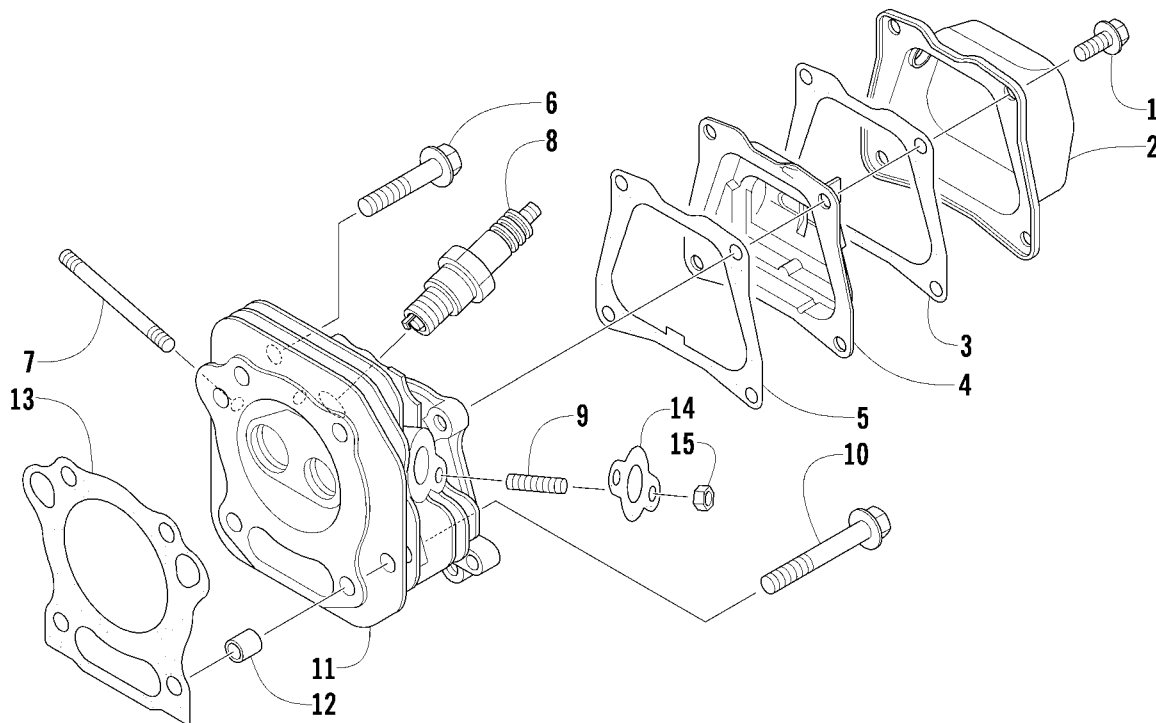

## CYLINDER AND AIR BREATHER ASSEMBLY

0744-912


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-121	4	Screw, Cap	9	3020-118	2	Bolt, Stud
2	3020-027	1	Cover, Cylinder Head	10	3020-125	2	Screw, Cap
3	3020-026	1	Gasket, Head	11	3020-008	1	Head, Cylinder
4	3020-025	1	Breather, Air	12	3020-128	2	Pin, Dowel
5	3020-028	1	Gasket, Breather	13	3020-009	1	Gasket, Cylinder Head
6	3020-124	2	Screw, Cap	14	3020-059	1	Gasket, Exhaust
7	3020-093	2	Bolt, Stud	15	3020-117	2	Nut
8	0217-809	1	Plug, Spark (BPR4ES)				

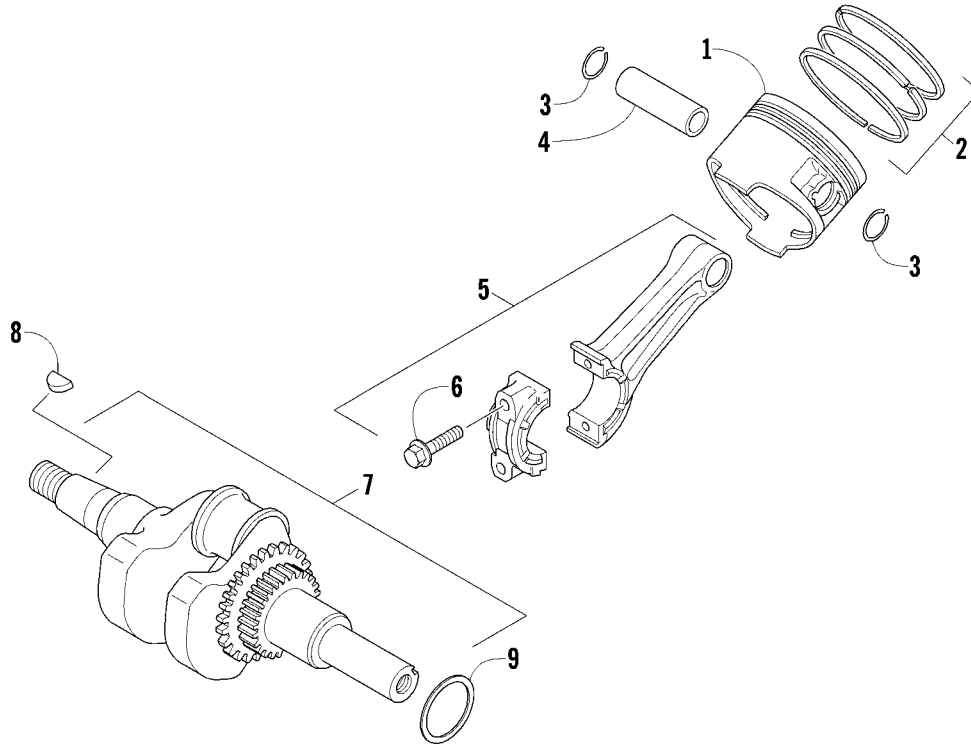

## PISTON AND CRANKSHAFT ASSEMBLY

0744-914


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-013	1	Piston	3	3020-115	2	Circlip
	3020-015	1	Piston, Oversized (0.25 mm) - Optional	4	3020-014	1	Pin, Piston
	3020-016	1	Piston, Oversized (0.50 mm) - Optional	5	3020-031	1	Rod, Connecting - Assembly (inc. 6)
2	3020-010	1	Ring, Piston - Set	6	3020-032	2	● Screw, Cap
	3020-011	1	Ring, Piston - Set - Oversized (0.25 mm) - Optional	7	3020-029	1	Crankshaft Assembly
	3020-012	1	Ring, Piston - Set - Oversized (0.50 mm) - Optional	8	3020-098	1	Key
				9	3020-030	AR	Shim, Crankshaft

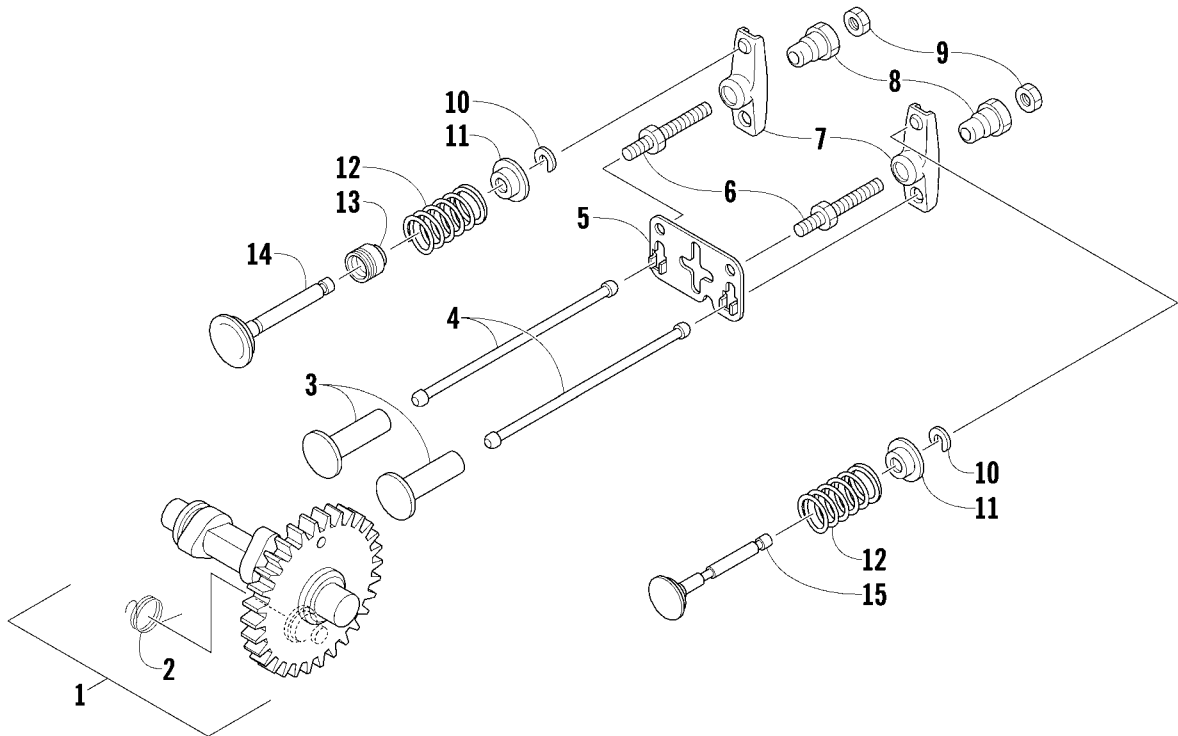

### CAMSHAFT AND VALVE ASSEMBLY

0744-915


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-049	1	Camshaft Assembly (inc. 2)	9	3020-047	2	Nut, Lock
2	3020-050	1	● Spring	10	3020-042	2	Cotter, Valve
3	3020-044	2	Tappet, Valve	11	3020-041	2	Retainer, Valve Spring
4	3020-045	2	Rod, Push	12	3020-104	2	Spring, Valve
5	3020-019	1	Guide, Push Rod	13	3020-078	1	Seal, Valve
6	3020-046	2	Bolt, Stud w/Nut	14	3020-017	1	Valve, Intake
7	3020-043	2	Arm, Rocker	15	3020-018	1	Valve, Exhaust
8	3020-048	2	Pivot, Rocker Arm				

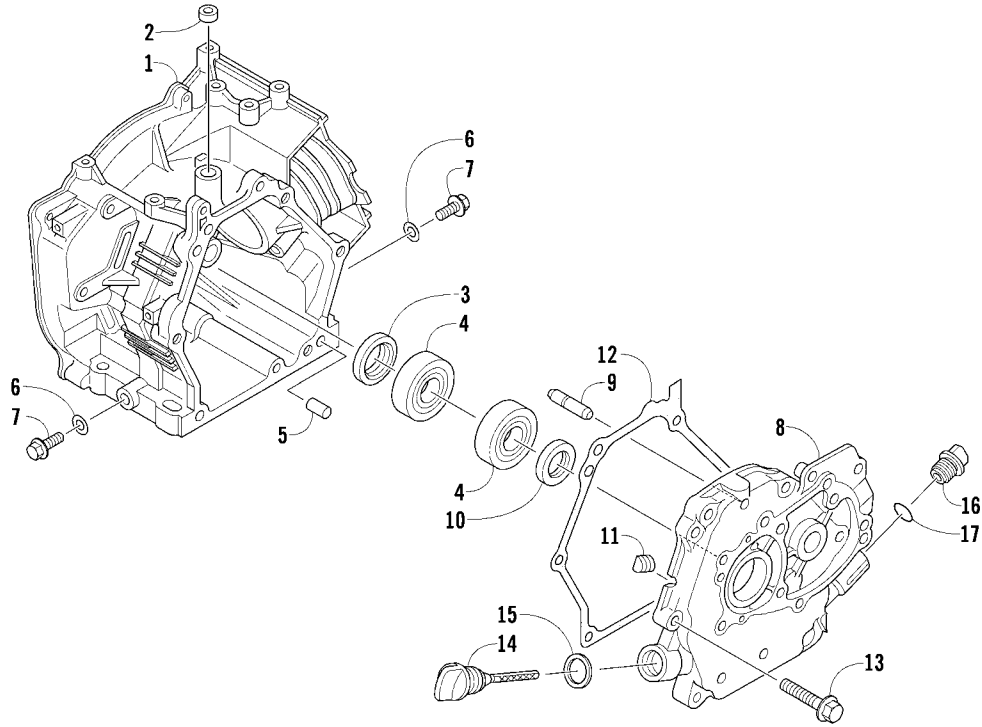

## CRANKCASE/COVER ASSEMBLY

0744-916


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-024	1	Crankcase	10	3020-109	1	Seal, Oil
2	3020-111	1	Seal, Oil	11	3020-100	1	Plug
3	3020-110	1	Seal, Oil	12	3020-063	1	Gasket, Crankcase Cover
4	3020-113	2	Bearing	13	3020-123	6	Screw, Cap
5	3020-127	2	Pin, Dowel	14	3020-061	1	Stick, Oil Level
6	3020-101	2	Gasket	15	3020-102	1	Gasket
7	3020-116	2	Screw, Cap	16	3020-060	1	Plug, Oil Level
8	3020-062	1	Cover, Crankcase	17	3020-112	1	O-Ring
9	3020-040	1	Shaft, Governor Gear				

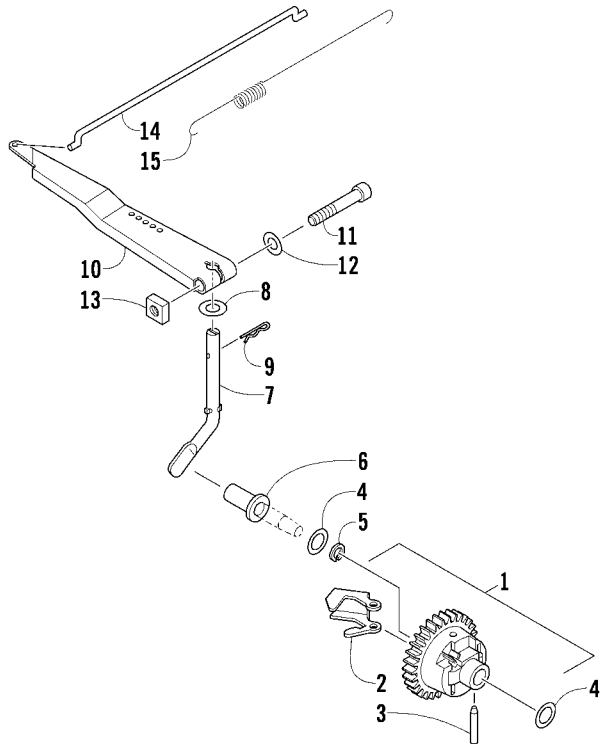

### GOVERNOR ASSEMBLY

0744-917


Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-039	1	Gear, Governor - Assembly (inc. 2-3)	9	3020-103	1	Clip, Hairpin
2	3020-033	2	● Slider, Governor	10	3020-037	1	Arm, Governor
3	3020-034	2	● Pin, Alignment	11	3020-126	1	Screw, Cap
4	3020-097	2	Washer	12	3020-107	1	Washer
5	3020-114	1	Circlip	13	3020-096	1	Nut
6	3020-035	1	Sleeve	14	3020-038	1	Rod, Carburetor
7	3020-036	1	Shaft, Governor Control	15	3020-105	1	Spring
8	3020-106	1	Washer				

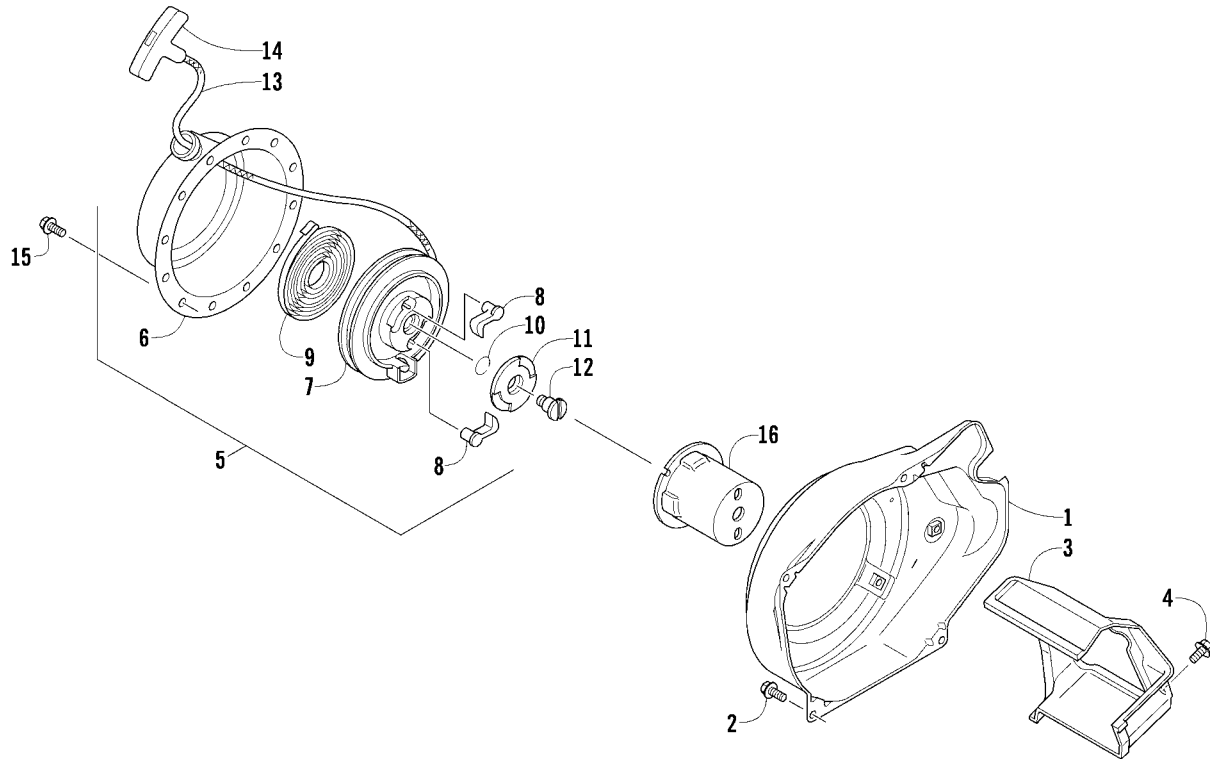

## RECOIL STARTER AND AIR SHROUD ASSEMBLY

0744-918

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-051	1	Cowling, Ventilation	9	3020-066	1	● Spring, Spiral
2	3020-120	4	Screw, Cap	10	3020-068	1	● Spring, Friction
3	3020-052	1	Shroud, Air	11	3020-069	1	● Plate, Drive
4	3020-121	1	Screw, Cap	12	3020-074	1	● Screw, Shoulder
5	3020-064	1	Starter, Recoil - Assembly (inc. 6-14)	13	3020-072	1	● Rope, Starter
6	3020-065	1	● Housing, Recoil	14	3020-073	1	● Grip, Rope
7	3020-067	1	● Reel	15	3020-119	3	Screw, Cap
8	3020-071	2	● Arm, Ratchet	16	3020-070	1	Pulley, Starter

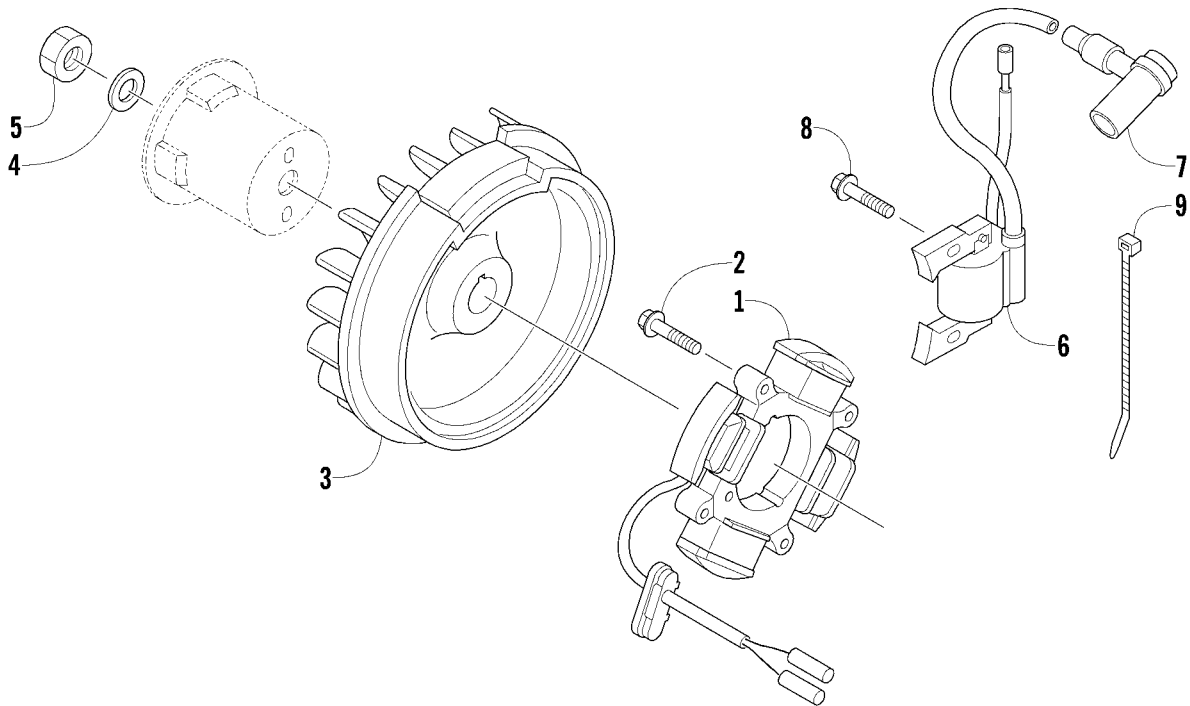

# MAGNETO

0744-919

Ref	Part No.	New Qty	Description	Ref	Part No.	New Qty	Description
1	3020-006	1	Stator	6	3020-076	1	Coil, Ignition - Assembly
2	3020-092	4	Screw, Cap	7	3020-075	1	Cap, Spark Plug
3	3020-007	1	Rotor/Flywheel	8	3020-122	2	Screw, Cap
4	3020-108	1	Washer	9	3020-077	AR	Tie, Cable
5	3020-095	1	Nut				

